

- Ensure you have adequate clearance behind the surface for screw and/or bolt penetration, and that no cabling, plumbing or rigging will be adversely affected.
- 3) We recommend the use of a waterproof sealant between the collar and the surface.
- 4) Assemble as shown below.

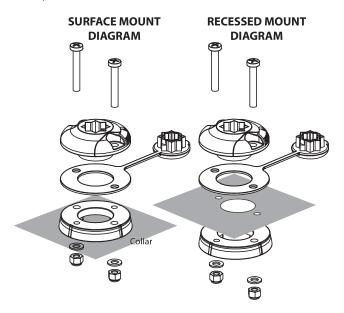

SIDEPORTS

- SidePorts are used to mount vertical ports on vertical surfaces and vice versa.
- 2) The mounting template suits both StarPorts and SidePorts. Follow the diagram below for mounting.

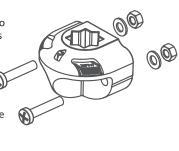

TRACNUTS1)Do not use the StarPort


collar for installation.

2) Insert the nuts behind the
TracPort before sliding the
TracNut in. Follow the
diagram below for
mounting.

3) Note: you can also mount a SidePort into a TracNut.

Note:

Use of Petroleum based lubricants on the StarPort slide will cause failure. Silicone based products are best suited. (Please check can contents before using).

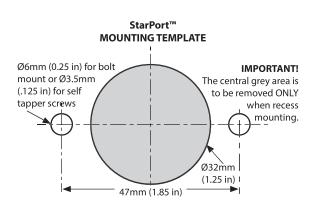

RB-BC12. E